





# Application examples

## Fire protection in the lintel area with a plaster pan

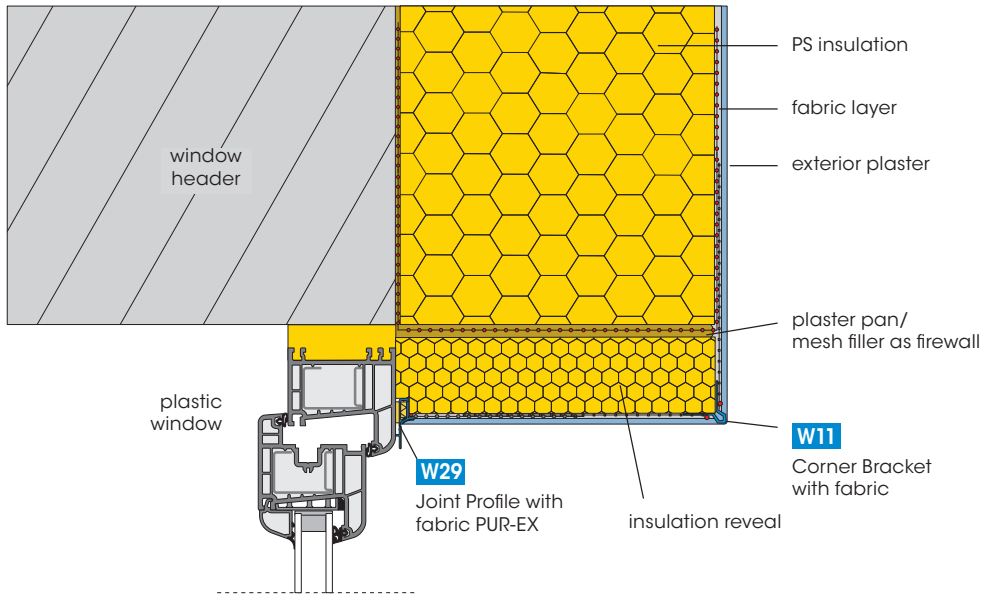

## Application in plastic warm window

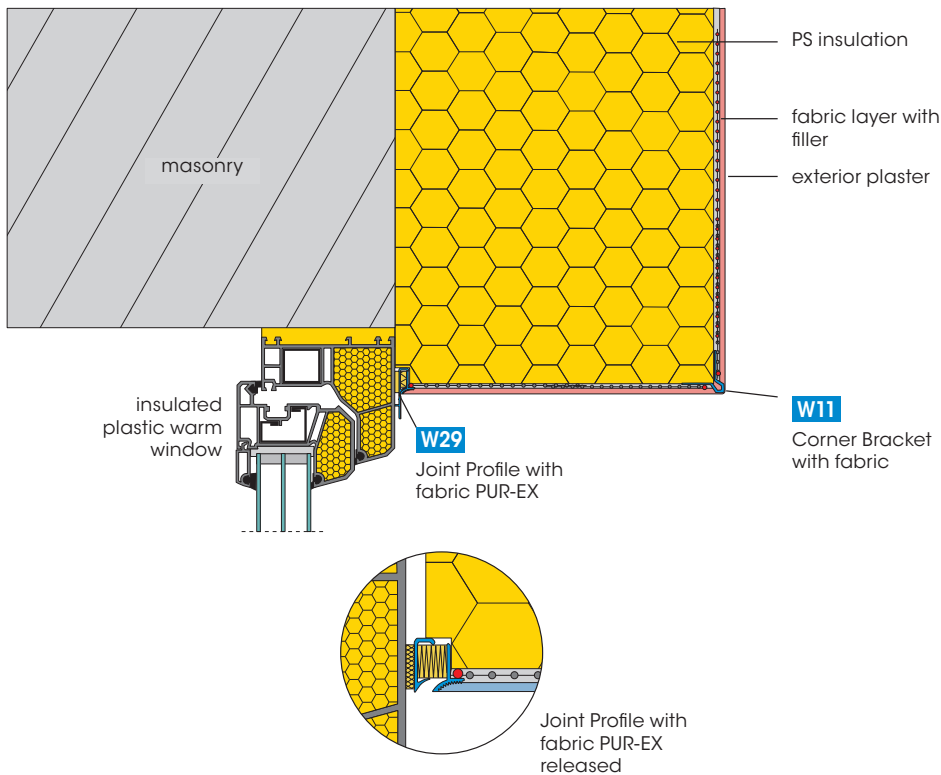

APU<sup>®</sup> APU<sup>®</sup> APU<sup>®</sup>