




## APU Plastic Nail Z21 for perforated profiles<sup>\*)</sup>

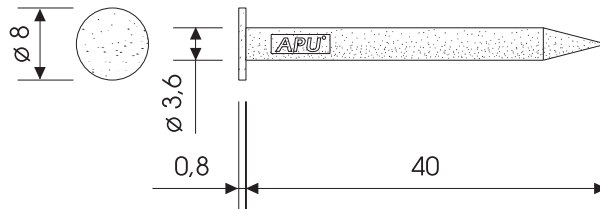



The APU Plastic Nail Z21 simplifies setting of profiles in thermal insulation composite systems.

The profiles are aligned without the fixing mortar between the insulation and frame, the fabric is folded out, the profile pressed in and the Plastic Nail is pressed through the hole in the profile into the insulation board. By applying the fabric filler the profile fabric and facade fabrics of the thermal insulation composite system are embedded overlapping into the filler.

For each profile at least **4** Plastic Nails per running meter must be used.

### Example W36-plus

APU Plastic Nail Z21  
min. 4 pieces/meter

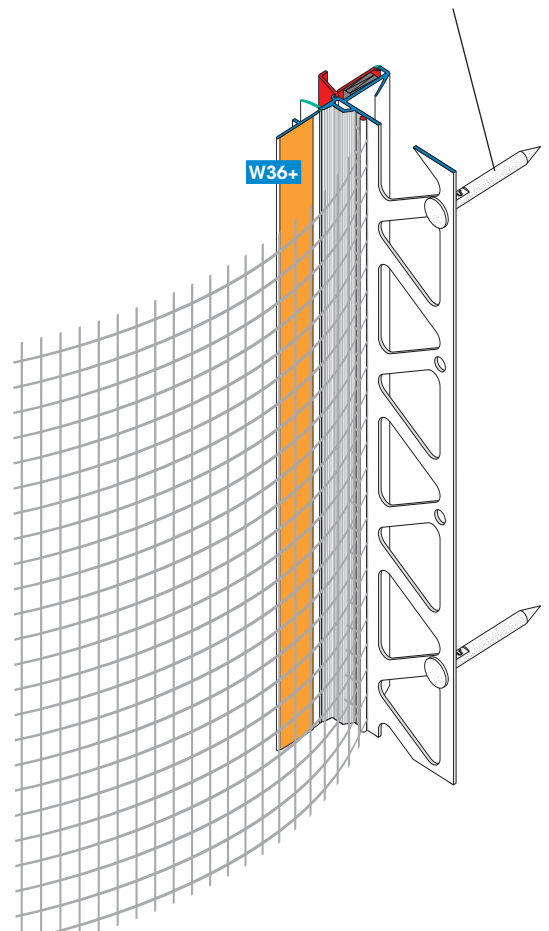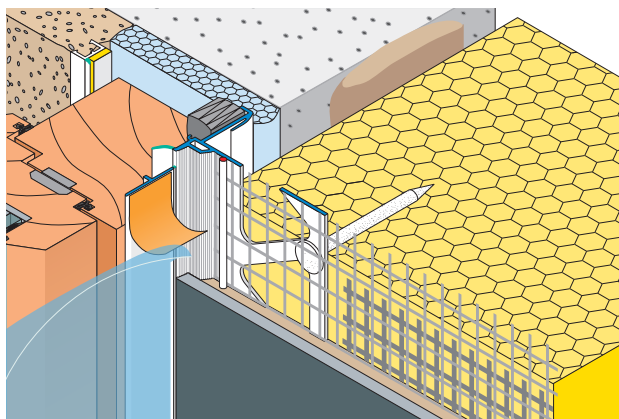

**Available packed unit:**  
per pack 20 bags of 50 pieces = 1000 pieces

<sup>\*)</sup> not to be used for vacuum insulation boards  
Instead, use hotmelt adhesive pads or similar  
product for fixing.